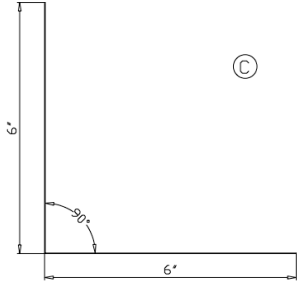
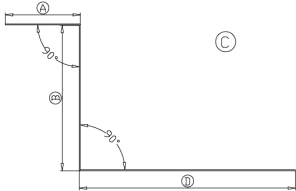
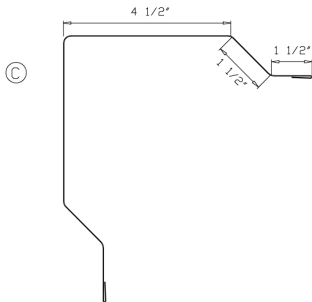
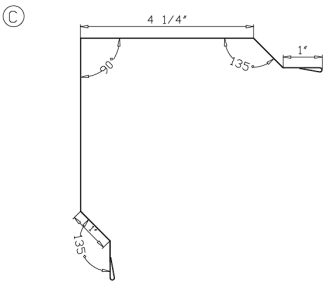
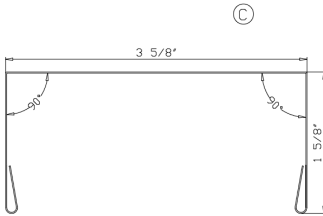
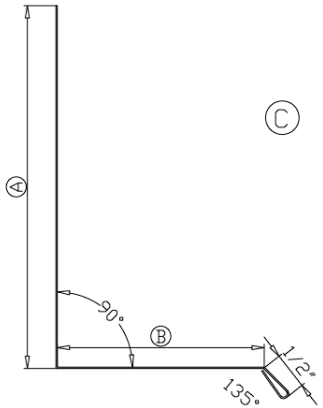
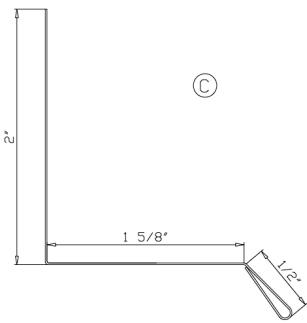


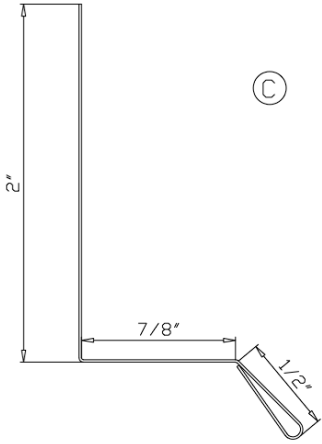
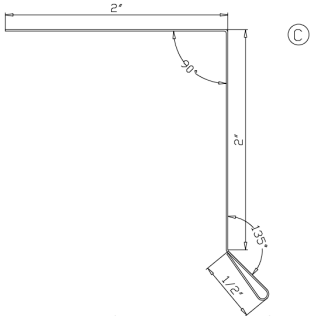
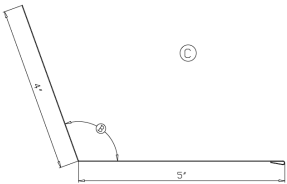
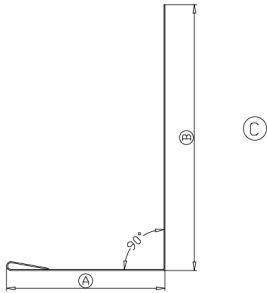


Trim comes standard in 10' lengths, but can be made up to 21'. Trim over 10' will be made in 26 Gauge.

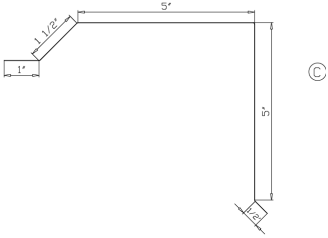
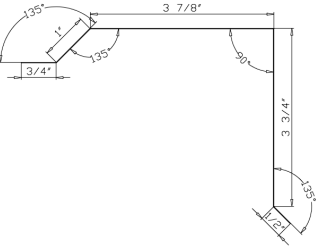
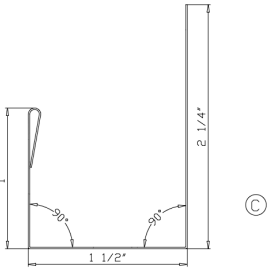
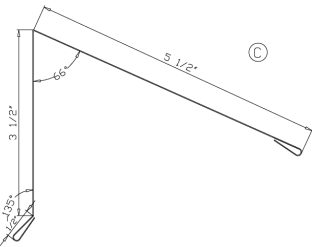
Trim	Length	Girth	Gauge	Description
 <p>6x6 Flashing</p>	10' - 21'	12"	29 Gauge 26 Gauge	Flashes the area between the wall and the panel where the panel runs perpendicular to the wall.
 <p>Chimney Flashing</p>	10' - 21'	*	29 Gauge 26 Gauge	Flashes the area and seals the gap between a chimney and a roof. *Need Dimensions
 <p>Corner R-Panel</p>	10' - 21'	16"	29 Gauge 26 Gauge	Flashes the area at the corner of two walls to seal the sides of the panels. *For R-Panel Profile

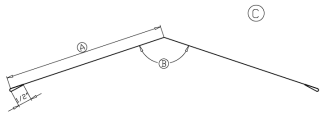
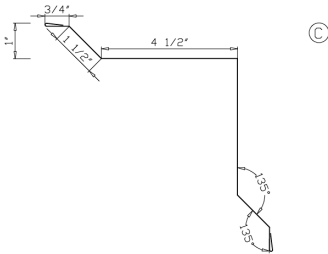
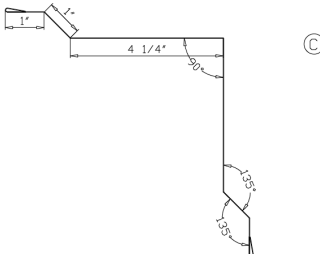
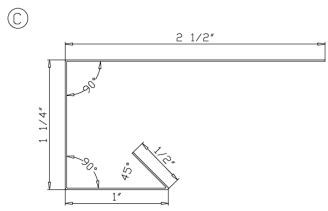
Trim	Length	Girth	Gauge	Description
 <p>Corner</p>	10' - 21'	13.5"	29 Gauge 26 Gauge	Flashes the area at the corner of two walls to seal the sides of the panels.  *For Tuff Rib Profile
 <p>C Trim</p>	10' - 21'	8"	29 Gauge 26 Gauge	Flashing seals the joints between metal roofing panels, preventing water from seeping into the roof structure
 <p>Door Drip</p>	10' - 21'	*	29 Gauge 26 Gauge	Flashing used at the bottom of a door frame to direct water away from the door and prevent water damage to the door structure and surrounding areas.
 <p>Drip Cap R-Panel</p>	10' - 21'	5"	29 Gauge 26 Gauge	Flashing used at the eaves and rake edges of a roof to direct water away from the fascia and into the gutter.  *For R-Panel Profile

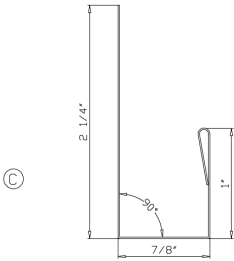
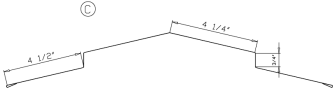
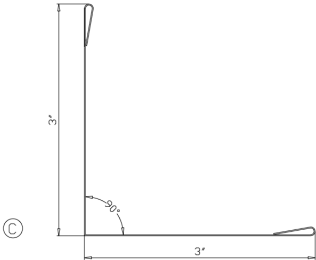
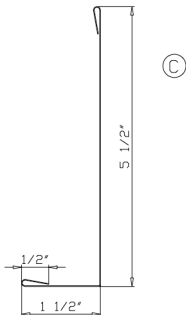


Trim	Length	Girth	Gauge	Description
 <p>Drip Cap</p>	10' - 21'	4"	29 Gauge 26 Gauge	Flashing used at the eaves and rake edges of a roof to direct water away from the fascia and into the gutter.  *For Tuff Rib Profile
 <p>Drip Edge</p>	10' - 21'	5"	29 Gauge 26 Gauge	Used at the eave of the building to flash the fascia and to help protect against water that comes from the end of the panel.
 <p>Endwall</p>	10' - 21'	9½"	29 Gauge 26 Gauge	Flashes the area between the wall and the panel where the panel runs perpendicular to the wall. Please specify the pitch of the roof.
 <p>Fascia</p>	10' - 21'	*	29 Gauge 26 Gauge	Attaches to the fascia board for cosmetic reasons as well as to protect against water.  *Need Dimensions

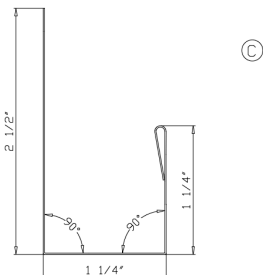
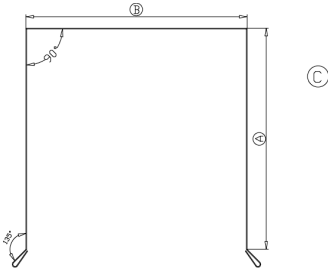
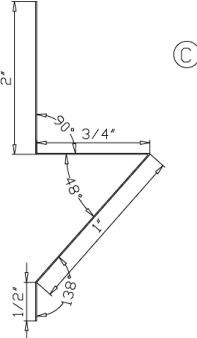
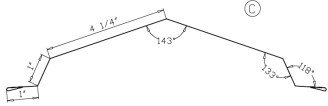


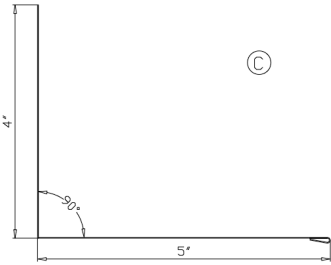
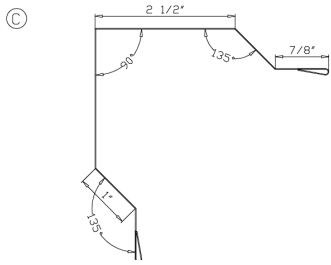
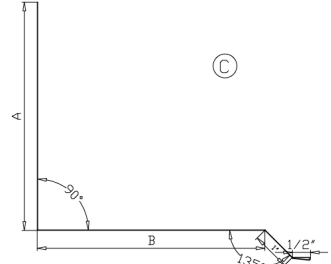
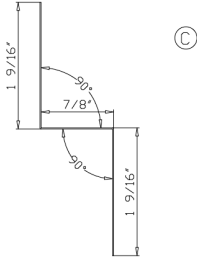
Trim	Length	Girth	Gauge	Description
 <p>Gable R-Panel</p>	10' - 21'	13"	29 Gauge 26 Gauge	<p>Installed at the gable end of a structure to help hold down the panel as well as prevent water from blowing under the roof panels at the gable end.</p> <p>*For R Panel Profile</p>
 <p>Gable</p>	10' - 21'	9¾"	29 Gauge 26 Gauge	<p>Installed at the gable end of a structure to help hold down the panel as well as prevent water from blowing under the roof panels at the gable end.</p> <p>*For Tuff Rib Profile</p>
 <p>Head Trim R-Panel</p>	10' - 21'	4¼"	29 Gauge 26 Gauge	<p>Flashing is used to cover and protect the top edges of metal roofing panels, particularly at the ridge or peak of a roof.</p> <p>*For R Panel Profile</p>
 <p>High Side Trim</p>	10' - 21'	10½"	29 Gauge 26 Gauge	<p>Used at the top of a shed type roof to keep water from blowing in underneath the panels.</p>

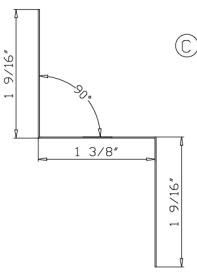
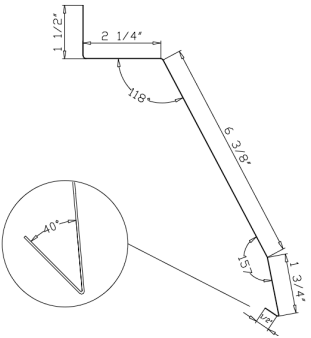
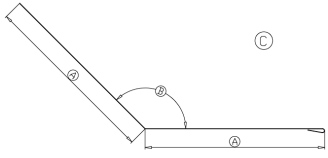
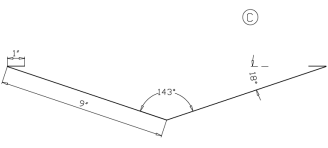
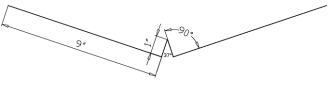
Trim	Length	Girth	Gauge	Description
 <p>Hip Cap</p>	10' - 21'	*	29 Gauge 26 Gauge	Used at hip connections of a roof when something smaller than a ridge cap is desired as in smaller structures. *Need Dimensions
 <p>Inside Corner R-Panel</p>	10' - 21'	14½"	29 Gauge 26 Gauge	Flashing is used where two metal panels intersect at the inside corner of a wall or roof. *For R-Panel Profile
 <p>Inside Corner</p>	10' - 21'	13½"	29 Gauge 26 Gauge	Flashing is used where two metal panels intersect at the inside corner of a wall or roof. *For Tuff Rib Profile
 <p>Jamb Trim R-Panel</p>	10' - 21'	5¼"	29 Gauge 26 Gauge	Flashing is used to cover the gap between the door frame and the wall.

Trim	Length	Girth	Gauge	Description
 <p>J-Trim</p>	10' - 21'	5"	29 Gauge 26 Gauge	<p>Flashing can be used to finish the edges of siding panels, around windows, doors, and other openings to provide a neat finish and protect the edges.</p> <p>*For Tuff Rib Profile</p>
 <p>Oversized Ridge</p>	10' - 21'	12"	29 Gauge 26 Gauge	<p>Flashing used to cap the intersections of a roof at the peak. Can be used for gable or hip roofs.</p>
 <p>Perimeter Angle</p>	10' - 21'	7"	29 Gauge 26 Gauge	<p>Flashing can be used in roofing, siding, and interior trim work to enhance the durability and appearance of a project.</p>
 <p>Perimeter Trim</p>	10' - 21'	7½"	29 Gauge 26 Gauge	



Trim	Length	Girth	Gauge	Description
 <p>J-Trim R-Panel</p>	10' - 21'	5½"	29 Gauge 26 Gauge	<p>Flashing can be used to finish the edges of siding panels, around windows, doors, and other openings to provide a neat finish and protect the edges.</p> <p>*For R-Panel Profile</p>
 <p>Mansard Cap</p>	10' - 21'	*	29 Gauge 26 Gauge	*Need Dimensions
 <p>Rat Guard/Base Trim</p>	10' - 21'	4¼"	29 Gauge 26 Gauge	*For Tuff Rib Profile
 <p>Ridge</p>	10' - 21'	13½"	29 Gauge 26 Gauge	Used to cap the intersections of a roof at the peak. Can be used for gable or hip roofs.

Trim	Length	Girth	Gauge	Description
 <p>Sidewall</p>	10' - 21'	9½"	29 Gauge  26 Gauge	Flashes the area between the wall and the panel where the panel is horizontal to the wall.
 <p>Small Corner</p>	10' - 21'	7¾"	29 Gauge  26 Gauge	
 <p>Step Transition</p>	10' - 21'	*	29 Gauge  26 Gauge	*Need Dimensions
 <p>S-Trim</p>	10' - 21'	4"	29 Gauge  26 Gauge	*For Tuff Rib Profile

Trim	Length	Girth	Gauge	Description
 <p>S-Trim R-Panel</p>	10' - 21'	4½"	29 Gauge 26 Gauge	*For R-Panel Profile
 <p>Track Cover</p>	10' - 21'	12½"	29 Gauge 26 Gauge	
 <p>Transition</p>	10' - 21'	*	29 Gauge 26 Gauge	Used to flash valley connection. The valley lip helps to divert water if it reaches the top of the valley.  *Need Dimensions
 <p>Valley</p>	10' - 21'	20"	29 Gauge 26 Gauge	Used to flash valley connection. The valley lip helps to divert water if it reaches the top of the valley.
 <p>W-Valley</p>	10' - 21'	20"	29 Gauge 26 Gauge	Used to flash valley connection. The valley lip helps to divert water if it reaches the top of the valley. The center rib helps slow the velocity of water entering the valley.